


SEAT REMOVAL AND INSTALLATION GUIDELINES

2017 CHRYSLER PACIFICA



Front Seat Removal

1. Stow the 2nd row seats in the floor.
2. If it's an 8-passenger, remove the 2nd row center seat.
 - 7-passenger does not have 2nd row center seat.
3. Remove the sill panels and B pillar trim for both the driver and passenger sides.

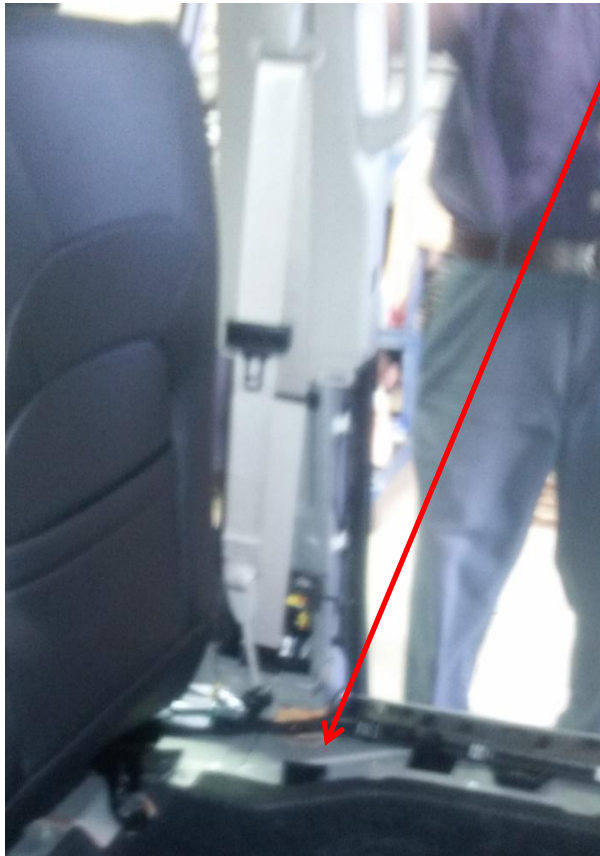

4. Remove the rear front seat track covers.



On the inboard side of the track there is a clip engagement slot that needs to be released.

5. Remove the carpet insert. (Has snap fasteners)



6. Remove bolted down carpet retaining load floor.

CAUTION: Make sure to remove all bolts.



7. The rear front seat bolts are now accessible. Unbolt and remove the front seats through the rear doors.



8. Reverse steps for re-installing front seats.

2nd Row Removal and Install

1. We recommend installing outboard seats in the vehicle. If removal is preferred, disconnect wiring harness first.

CAUTION: BE CAREFUL. SEATS ARE EXTREMELY HEAVY AND HAVE SHARP CORNERS.

2. If the second row remains in the vehicle while reinstalling the front seats, make sure to cover or protect the seats from getting marred or scratched by the floor pan bezel when installing.

TIP: Re-install center seat (if present) after all other work is complete.



Connectors
located behind the
second row seats.




3rd Row Removal and Install

1. Remove 60 and 40 rear seats.
2. Remove carpeted kick plates and SAVE for re-install.
3. Remove push pin with the velcro head from cloth for use on leather trim.

If it breaks during removal, please apply with adhesive to the carpet on the leather trim.



4. When re-installing the 3rd row, tighten rear bolts first.

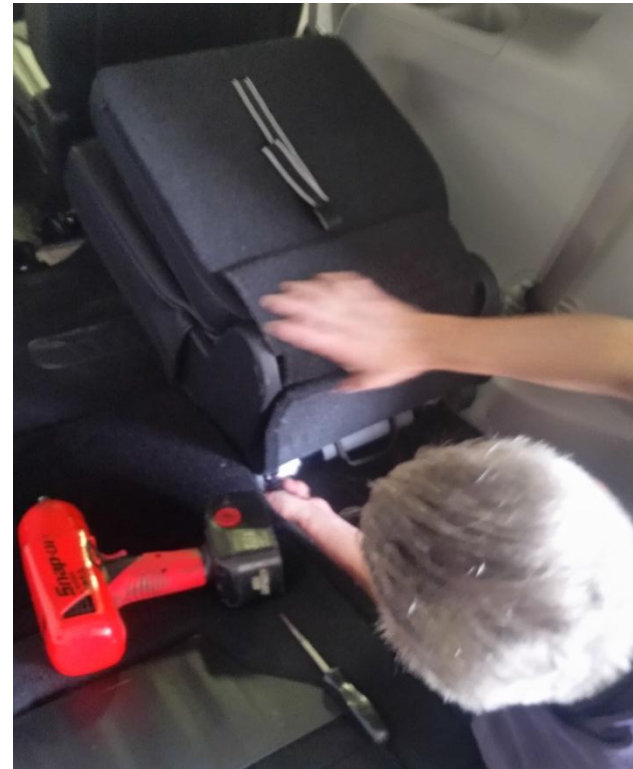

THE FOLLOWING SLIDE INCLUDES TORQUE DATA FOR ALL FASTENERS

TORQUE SPECS	N-m	Ft Lbs
Front Seat Bolts	65	48
Front Seat Armrest Bolt	25	18
Second Row Center Seatback Bolts	55	41
Second Row Stow-N-Go Armrest Bolt	25	18
Second Row Stow-N-Go Seat Bolts	68	50
Second Row Stow-N-Go Seat Nuts	58	43
Third Row Headrest Nuts	25	18
Third Row Seat Bolts	54	40
Third Row Seat Recliner Bolts	65	48