



DATE: January 2021

TOPIC: 2021 Toyota Sienna

A. Rear Cargo Carpeted Board Installation

(1) Cut carpeted board off ¼" inch above the sew line to avoid unstitching the factory clip on the backside.



(2) Re-attach pull strap plastic guides from factory covers through pre-cut drill holes.




(3) Pull cover on and cut holes for headrest posts.



(4) Re-attach headrest cables and finish installing the covers. Make sure you install the correct rear headrest as the cables are different between the RB60 & RB40.



(5) Once installed, cut slits in the cover and re-insert factory clip which is still sewn to the carpeted board.

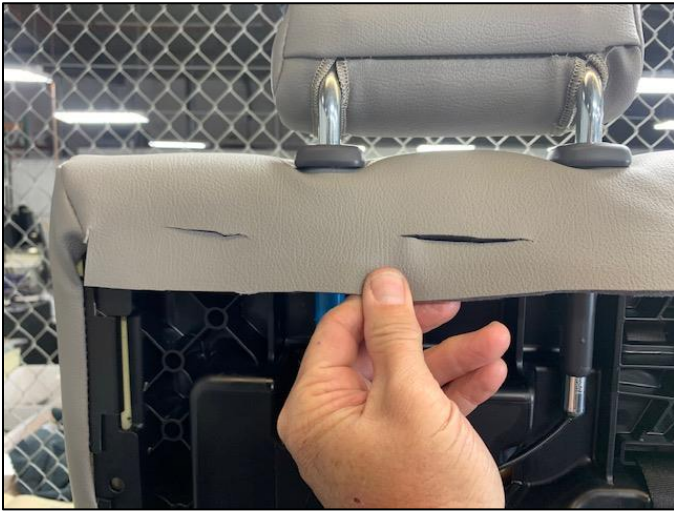

(6) Factory clips attach in the same original position.



(7) Pull the release strap through the slot and attach original factory backboard to the frame.



(8) Completed carpeted boards should fit snug and have a clean, finished factory look.



B. Middle Row Cushions

There are four bolts that secure the cushion to the frame. The front bolt hole is slotted so that the cushion can be adjusted before the bolts are tightened. If the seat cushion is not properly adjusted when the bolts are tightened, the seat lock mechanism will not engage. The seat should be adjusted so that the bolt is at the top of the slot and then tightened. This will allow the seat to lock properly when folded down.

